


## ----- Top of Clock -----

- 1) Choose location to mount clock
  - indoor use only; 0° - 40°C (32° - 104°F)
  - avoid direct sunlight
  - avoid high humidity, dusty or chemical vapor environments
  - avoid walls subject to vibration or shock

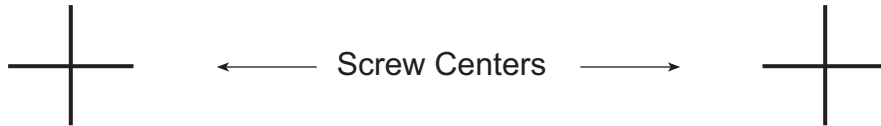

- 2) Place template against wall. Make sure it is level.  
Mark centers for screws (45" - 52" above floor)
- 3) Install (2) included screws, leaving 3/16" gap between wall and screw head.
- 4) Place clock mounting holes over screws and slide clock down until it stops at the top of the "keyhole" slot